✧

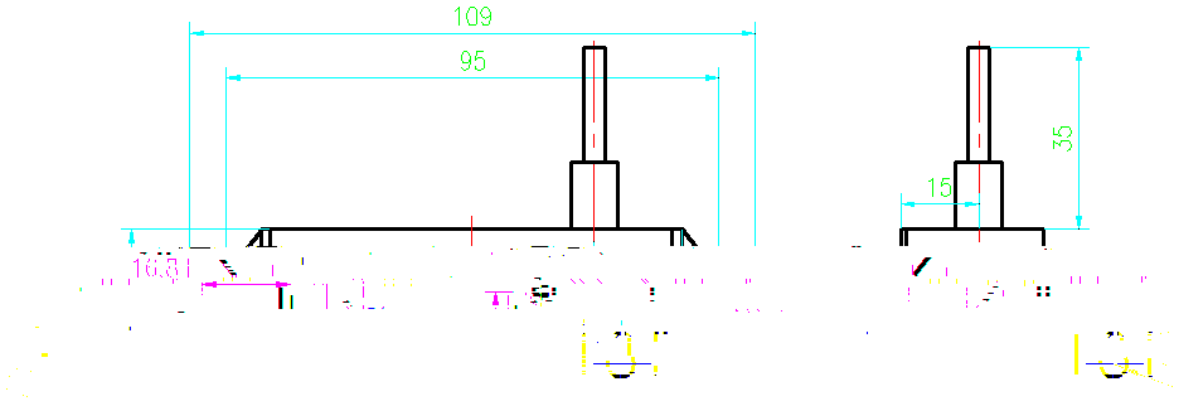
✧

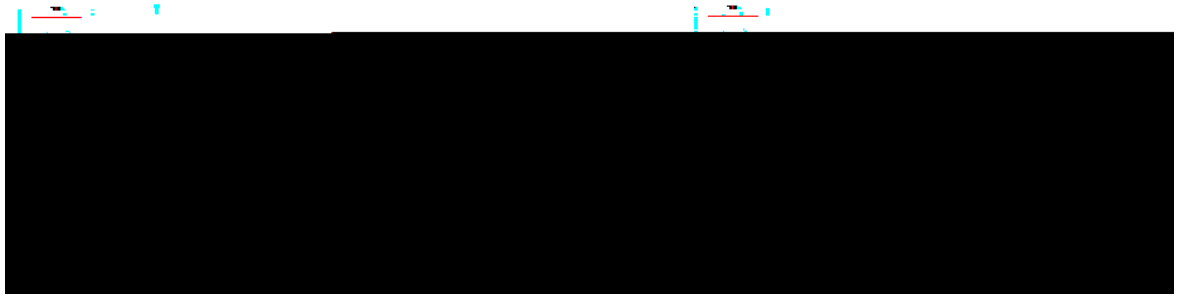
✧

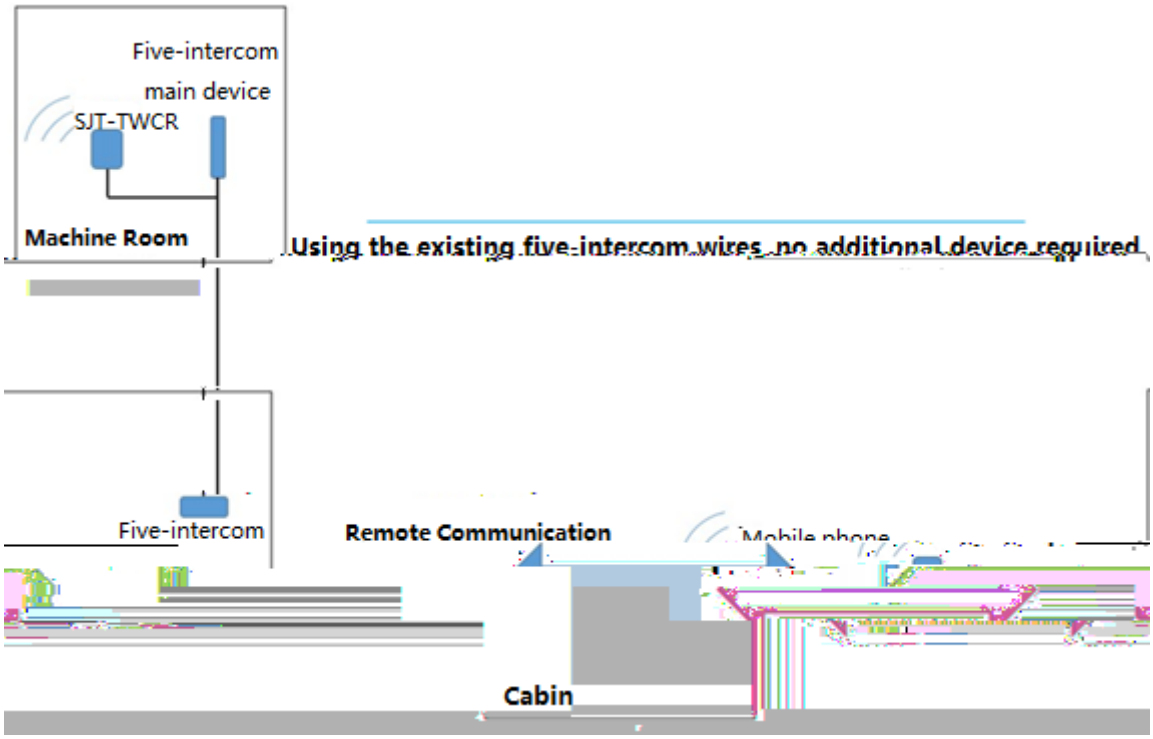
✧

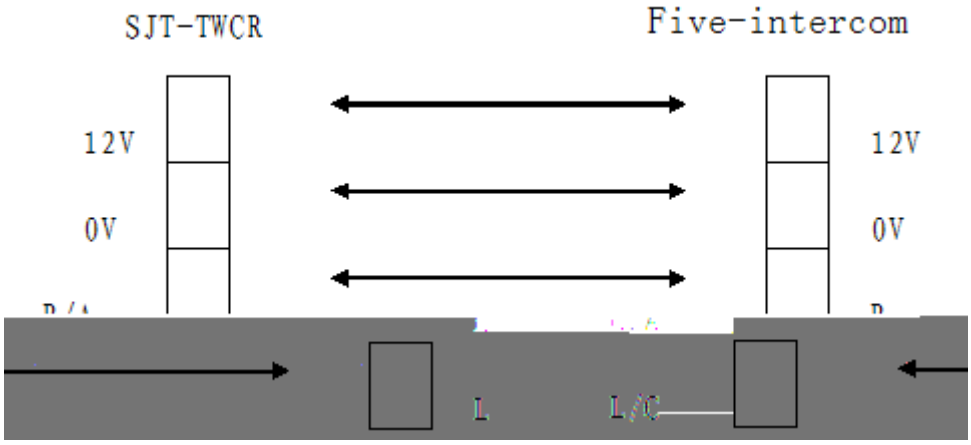
✧

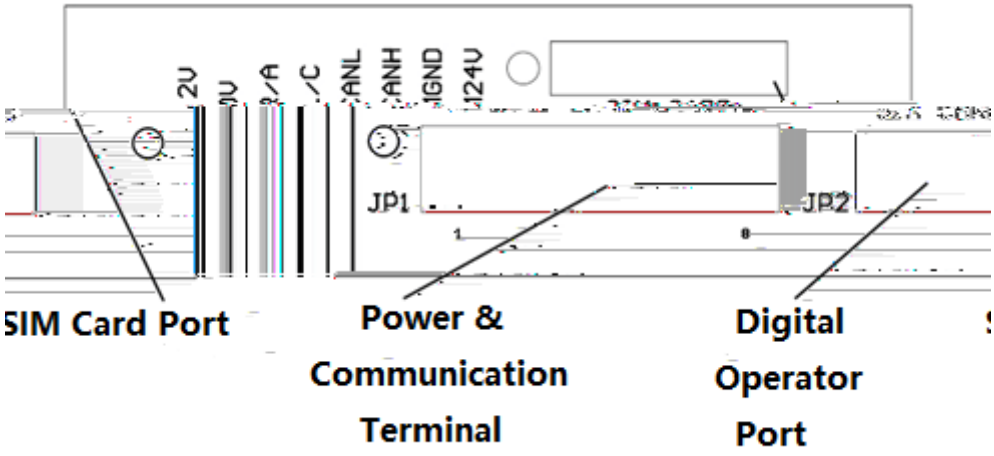
✧

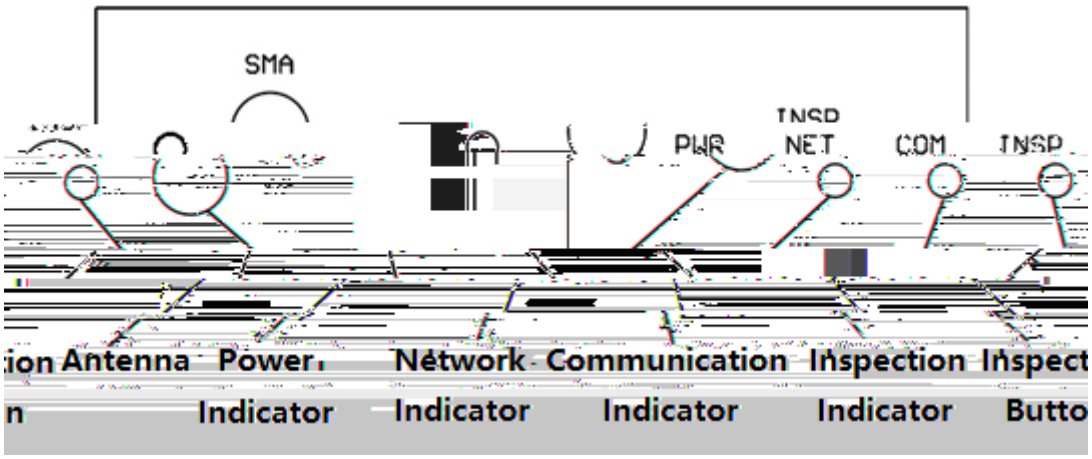

109
95
35
15
16.8



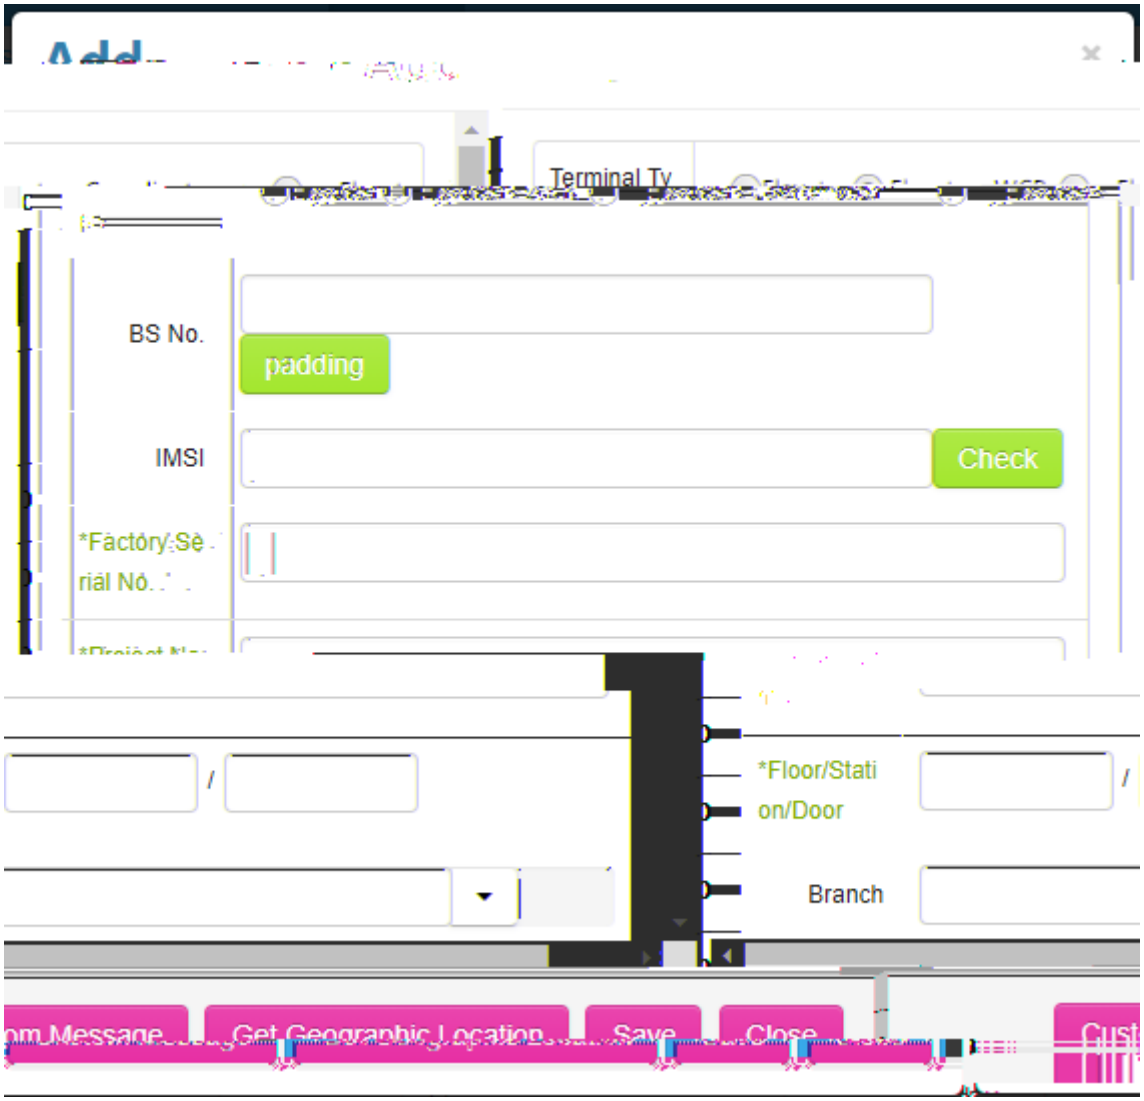

Five-intercom
main device
SJT-TWCR
Machine Room
Using the existing five-intercom wires, no additional device required
Five-intercom
Remote Communication
Cabin

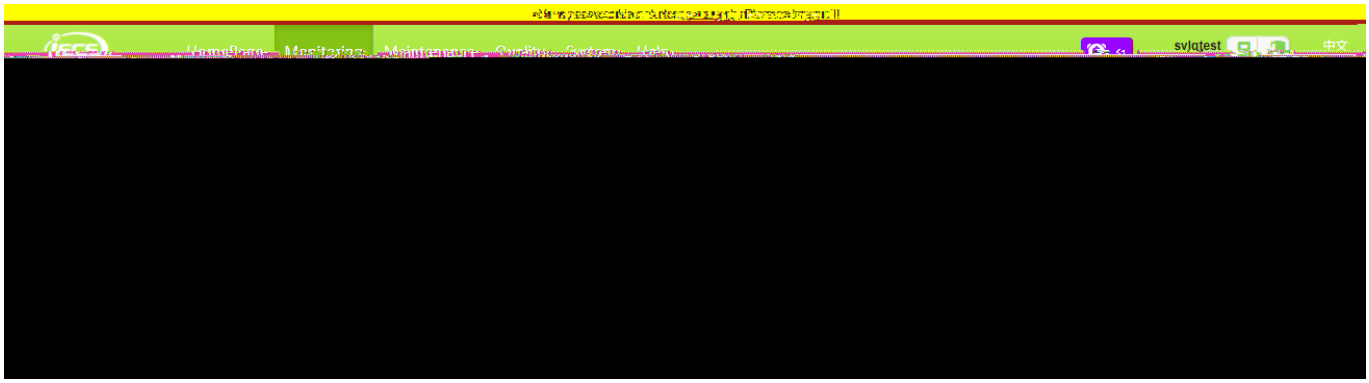

SJT-TWCR
Five-intercom
12V
0V
12V
0V
L
L/C

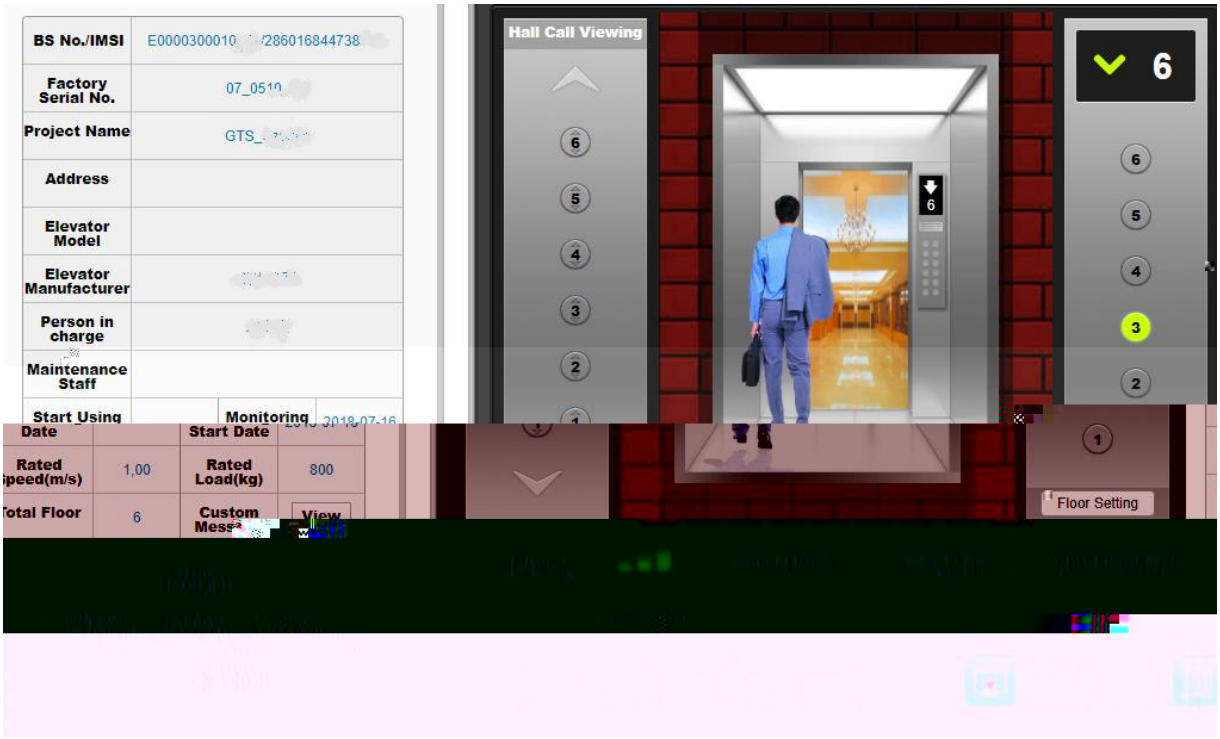

JP1
JP2
SIM Card Port
Power &
Communication
Terminal
Digital
Operator
Port

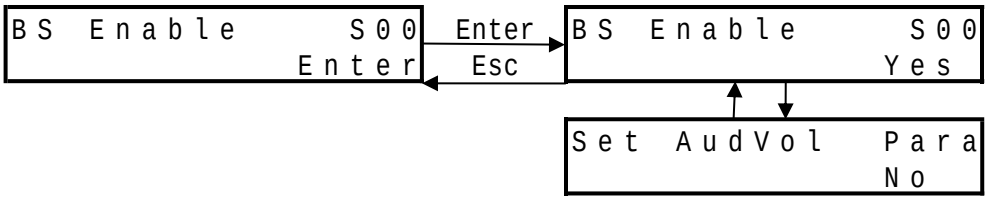

SMA
PWR
NET
COM
Power
Indicator
Network
Indicator
Communication
Indicator
Inspection
Indicator


-
-



Terminal Ty
BS No.
padding
IMSI
Check
*Factory Serial No.
*Floor/Station/Door
Branch
Get Geographic Location
Save
Close



HomePage
Monitoring
Maintenance
svjqtest


BS No./IMSI
E0000300010 /286016844738
Factory Serial No.
07_0510
Project Name
GTS_
Address
Elevator Model
Elevator Manufacturer
Person in charge
Maintenance Staff
Start Using Date
Monitoring Start Date
2018-07-16
Rated Speed(m/s)
1.00
Rated Load(kg)
800
Total Floor
6
Custom Mess
View
Hall Call Viewing
6
5
4
3
2
1
Floor Setting

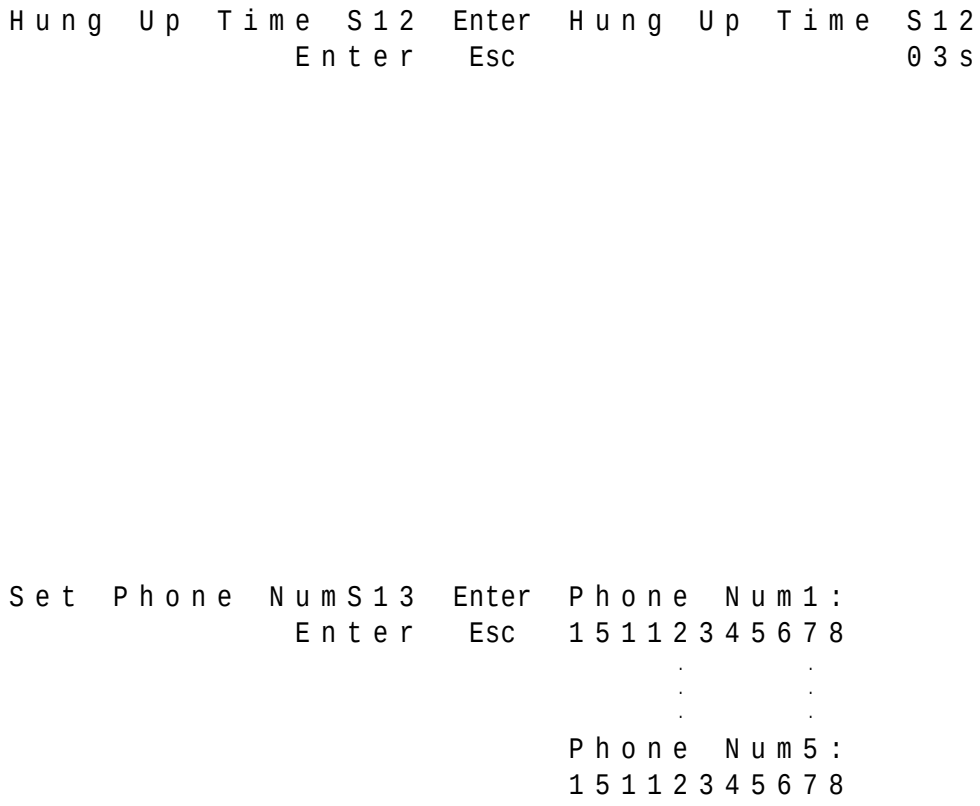

BS Enable S00
Enter
Enter
Esc
BS Enable S00
Yes
Set AudVol Para
No


Save Para S01
Enter
Enter
Esc
Save Success
Enter


Register S02
Need Registered
or
Register S02
Have Registered


Read Para S03
Enter
Enter
Esc
XXX-XX XXXX
Enter

Wri


Hung Up Time S12
Enter
Hung Up Time S12
Enter
Esc
03s
Set Phone NumS13
Enter
Enter
Esc
Phone Num1:
15112345678
Phone Num5:
15112345678
IMSI/BS No. M00
Enter
Enter
Esc
IMSI No:
460029827486 80
BS No:
E000030001015 0